11/11/2019

Version Upgrade Method by using Local File

- (1) Unzip the prepared zip file first and save as M5250434D354354101.vup.
- (2) Access IP address of this unit via Web Browser and log-in by typing ID and Pass word. Then screen will appear like an image shown right figure.



(3) Click "System" button in "Settings" on this screen, then you can see the new screen image with Basic, Advanced and Security. As a next step, click "Advanced" button. Then screen will appear like an image showed right figure.



(4) On the same screen, click "Firmware Upgrade" in Equipment Control" button, then new screen image will appear shown right figure.

REBOOTER RPC-M5C-EA	Firmware	Version Upgrade	_	_
Status	Current Fin	mware Information		
Basic	Firmware Version	1.00A.17070	3	
Monitoring	Model Type	RPC-M5C-E/	4	
Event Log	Version V	Jpgrade Method		
Control	Connect to the Online Updat	te Server	Start	
Power Control	Local File		Load	

(5) Click "Load" in "Version Upgrade Method" button, then it will appear acreen image showed right figure.

÷	Firmware File Selection	Ċ
	Send Firmware File	
	Select the firmware file and press send.	
	Please wait for a while until the execution result screen is displayed.	
	Choose File No file chosen Send	

- (6) On the same screen, click "Choose File" button and sellect the file M5250434D3543454101.vup what you have saved before.
- (7) Then click "Send" button and wait for around 3 minutes. In this process, screen image will not change!
- (8) The screen image shown as right figure if version up work correctly completed. The message with "(00)Successful completion" can be understood completed correctly. Then after you can click "Top Page" button. In case error code such as "05" or "31" dispayed on screen, please contact Meikyo Electric Co., Ltd...



(9) Version Up is completed, then you have to rest CPU. To do that, Then click "CPU Reeset" button shown on screen left and wait for nearly 10 seconds.

EBOOTER PC-M5C-EA	Easic Information								
Status	J	Device Information							
Basic		Device Name		M5C-EA-lwmt					
Monitoring		Location		lwmtDesk					
Event Log		Outlet Monitoring Condition							
Control		No.	Outlet Name		Status	Execute	Power		
		1	Outlet1			0	OFF		
ower Control		2	Outlet2			0	OFF		
Settings		3	Outlet3			0	OFF		
System		4	Outlet4			U	OFF		
Network									
Monitoring									
Schedule)								
Information									
Help)								
CPU Reset									
admin 92 168 1 235									
admin									

(10) Your version up is succeeded if you can see version status as "1.10B.190826/RPCM5EA.190419" by click "Information".